

Reel-N-Reel Instructions

LOADING | PAYOUT

cerrowire.com

cerrowire

Reel-N-Reel

STEPS FOR LOADING



Load the Reel-N-Reel so the take-up rotation is the opposite direction of the arrow on the outer flange.



Insert a drive pin through the outer and inner flanges to engage the reel with the take-up machine and center spindle mechanism. Ensure the drive pin is long enough to engage the inner reel, without protruding into the traverse.



Insert your wire tail into one of three holes in the hub that best retains the wire end.

PRO TIP

Use the heavy-duty pallet to position the Reel-N-Reel into the take-up machine, then unstrap the reel from the pallet. The pallet can remain under the reel during winding. Return the reel to the pallet and secure.

STEPS FOR PAYOUT



Position the reel and cradle pallet at the pull site. Orient so the direction of pull follows the directional arrow on the outer flange.



If leaving the reel on the cradle pallet: Remove the straps. Begin pulling wire off of the inner reel.



If removing the reel from the cradle pallet: Cut the straps and use a forklift to remove the Reel-N-Reel from the pallet. Chock the outer flanges on both the front and back sides. Begin pulling wire off of the inner reel.

WHEN FINISHED

After pulling is complete, return the Reel-N-Reel and strap it to the cradle pallet.